


## REAR STABILIZER REMOVAL/INSTALLATION [EXCEPT MZR-CD (RF Turbo)]

id0214008005a9

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.

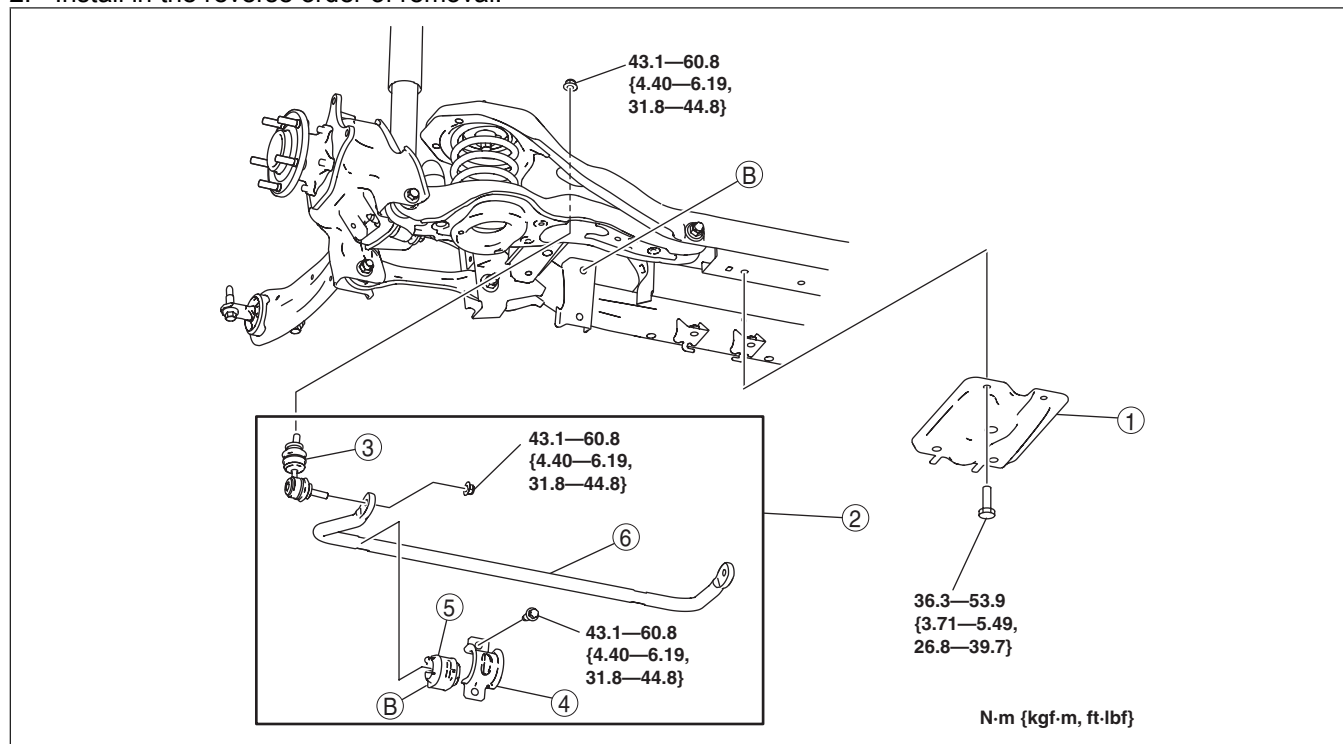


am3zzw00004229

1	Rear crossmember bracket
2	Rear stabilizer component (See Rear Stabilizer Component Installation Note .)
3	Stabilizer control link
4	Stabilizer bracket (See Stabilizer Bracket Removal Note .) (See Stabilizer Bracket Installation Note .)

5	Stabilizer bushing (See Stabilizer Bushing Installation Note .)
6	Rear stabilizer

### Stabilizer Bracket Removal Note


1. Secure the stabilizer bracket flange using a vise.
2. Remove the stabilizer bracket.

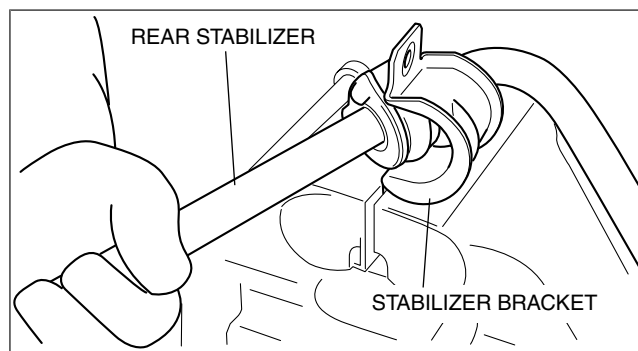


am3zzw00002856

### Stabilizer Bushing Installation Note

1. Place the stabilizer bushing so that the projection is facing toward the left side of the vehicle.

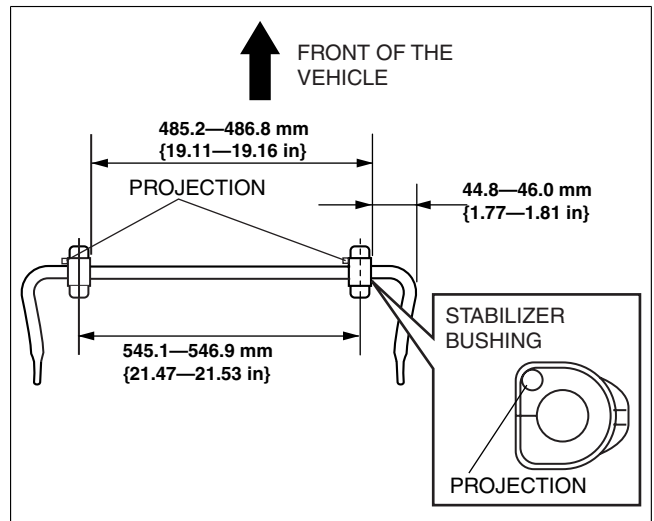


2. Widen the stabilizer bushing opening **16—26 mm {0.7—1.0 in}** and install the bushing to the rear stabilizer as shown in the figure.

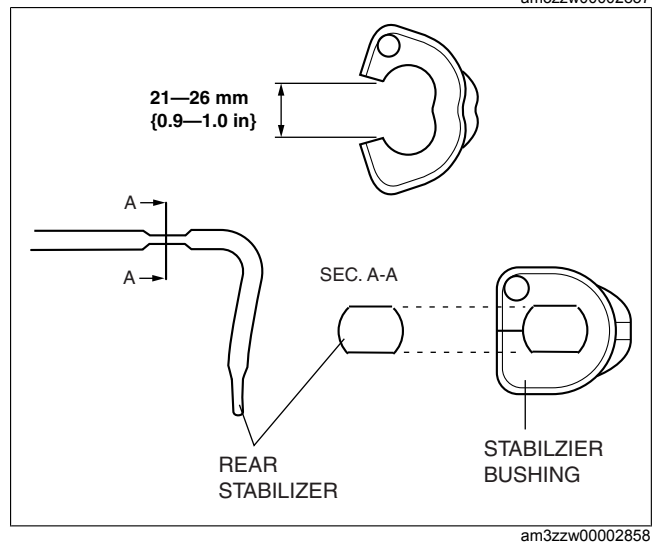

### Stabilizer Bracket Installation Note


1. Apply grease to the stabilizer bushing.
2. Install the stabilizer bracket using a vise.

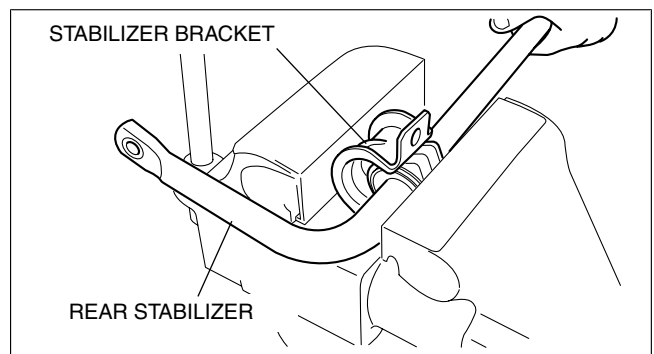

---

### Rear Stabilizer Component Installation Note

1. Tighten the bolts in order indicated in the figure.

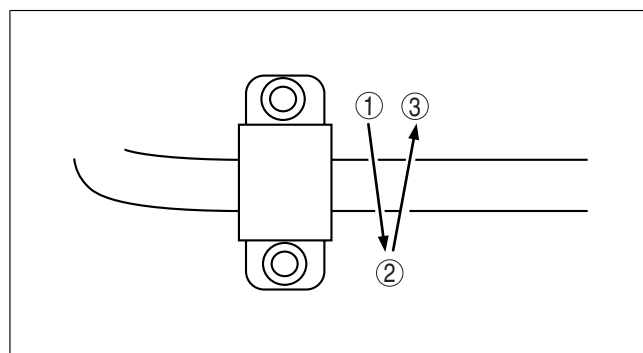

am3zzw00002860