


REAR SUSPENSION LOCATION INDEX

id021400800400

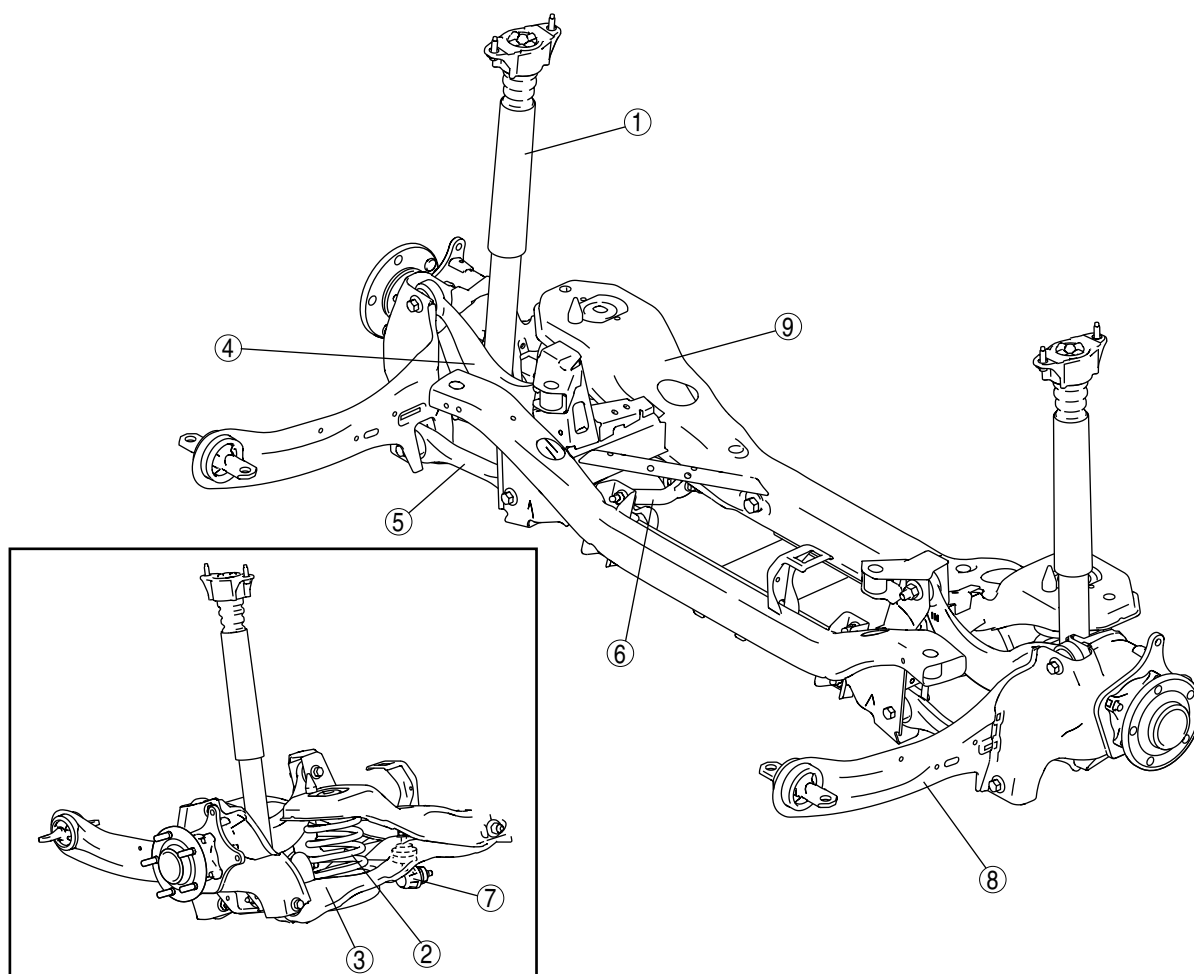

am3zzw00003386

| | |
|---|--|
| 1 | Rear shock absorber (See REAR SHOCK ABSORBER REMOVAL/ INSTALLATION.) (See REAR SHOCK ABSORBER INSPECTION.) (See REAR SHOCK ABSORBER DISPOSAL.) |
| 2 | Rear coil spring (See REAR COIL SPRING REMOVAL/ INSTALLATION.) |
| 3 | Rear lower arm (See REAR LOWER ARM REMOVAL/ INSTALLATION.) |
| 4 | Rear upper arm (See REAR UPPER ARM REMOVAL/ INSTALLATION.) |
| 5 | Rear lateral link (See REAR LATERAL LINK REMOVAL/ INSTALLATION.) |

| | |
|---|--|
| 6 | Rear stabilizer (See REAR STABILIZER REMOVAL/ INSTALLATION [MZR-CD (RF Turbo)].) (See REAR STABILIZER REMOVAL/ INSTALLATION [EXCEPT MZR-CD (RF Turbo)].) |
| 7 | Stabilizer control link (See STABILIZER CONTROL LINK INSPECTION.) |
| 8 | Rear trailing link (See REAR TRAILING LINK REMOVAL/ INSTALLATION.) |
| 9 | Rear crossmember (See REAR CROSSMEMBER REMOVAL/ INSTALLATION.) |