


# CONVENTIONAL BRAKE SYSTEM LOCATION INDEX

id041100800100

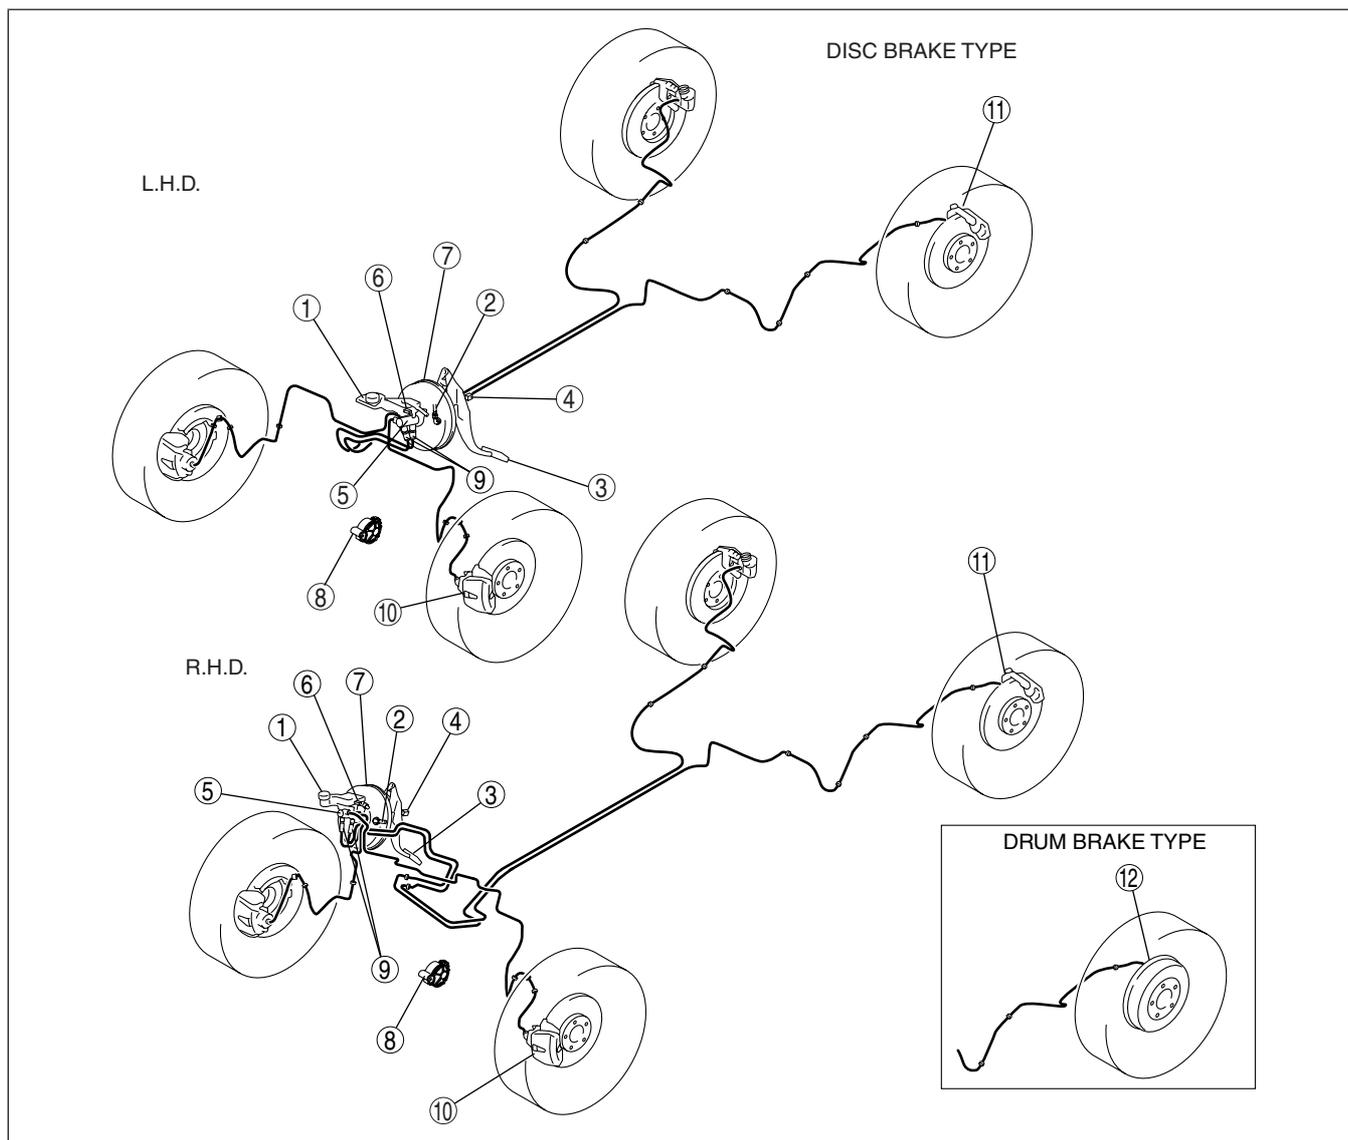

am3zzw00003151

1	Brake fluid (See AIR BLEEDING.)
2	Vacuum line (See VACUUM LINE INSPECTION [ZJ, ZY, Z6, LF, L3, L3 Turbo].) (See VACUUM LINE INSPECTION [MZ-CD 1.6 (Y6), MZR-CD (RF Turbo)].) (See VACUUM HOSE REMOVAL/INSTALLATION [ZJ, ZY, Z6, LF, L3, L3 Turbo].) (See VACUUM HOSE REMOVAL/INSTALLATION [MZ-CD 1.6 (Y6), MZR-CD (RF Turbo)].)
3	Brake pedal (See BRAKE PEDAL INSPECTION.) (See BRAKE PEDAL REMOVAL/INSTALLATION [EXCEPT MZ-CD 1.6 (Y6)].) (See BRAKE PEDAL REMOVAL/INSTALLATION [MZ-CD 1.6 (Y6)].)
4	Brake switch (See BRAKE SWITCH INSPECTION [EXCEPT MZ-CD 1.6 (Y6)].) (See BRAKE SWITCH INSPECTION [MZ-CD 1.6 (Y6)].)

5	<p>Master cylinder  (See MASTER CYLINDER REMOVAL/  INSTALLATION [L.H.D. EXCEPT L3 Turbo].)  (See MASTER CYLINDER REMOVAL/  INSTALLATION [L.H.D. L3 Turbo].)  (See MASTER CYLINDER REMOVAL/  INSTALLATION [R.H.D. EXCEPT L3 Turbo].)  (See MASTER CYLINDER REMOVAL/  INSTALLATION [R.H.D. L3 Turbo].)</p>
6	<p>Brake fluid level sensor  (See BRAKE FLUID LEVEL SENSOR  INSPECTION.)</p>
7	<p>Power brake unit  (See POWER BRAKE UNIT INSPECTION.)  (See POWER BRAKE UNIT REMOVAL/  INSTALLATION [L.H.D. ZJ, Z6, LF, MZR-CD (RF  Turbo)].)  (See POWER BRAKE UNIT REMOVAL/  INSTALLATION [R.H.D. ZJ, ZY, Z6, LF, L3, MZR-CD  (RF Turbo)].)  (See POWER BRAKE UNIT REMOVAL/  INSTALLATION [L.H.D. L3 Turbo].)  (See POWER BRAKE UNIT REMOVAL/  INSTALLATION [R.H.D. L3 Turbo].)  (See POWER BRAKE UNIT REMOVAL/  INSTALLATION [L.H.D. MZ-CD 1.6 (Y6)].)  (See POWER BRAKE UNIT REMOVAL/  INSTALLATION [R.H.D. MZ-CD 1.6 (Y6)].)</p>
8	<p>Vacuum pump (MZ-CD 1.6 (Y6), MZR-CD (RF  Turbo))  (See VACUUM PUMP INSPECTION [MZR-CD (RF  Turbo)].)  (See VACUUM PUMP REMOVAL/INSTALLATION  [MZ-CD 1.6 (Y6)].)  (See VACUUM PUMP REMOVAL/INSTALLATION  [MZR-CD (RF Turbo)].)</p>
9	<p>Proportioning valve  (See PROPORTIONING VALVE INSPECTION.)</p>
10	<p>Front brake (disc)  (See FRONT BRAKE (DISC) INSPECTION.)  (See FRONT BRAKE (DISC) REMOVAL/  INSTALLATION [EXCEPT L3 Turbo].)  (See FRONT BRAKE (DISC) REMOVAL/  INSTALLATION [L3 Turbo].)  (See DISC PAD (FRONT) REPLACEMENT  [EXCEPT L3 Turbo].)  (See DISC PAD (FRONT) REPLACEMENT [L3  Turbo].)  (See CALIPER (FRONT) DISASSEMBLY/  ASSEMBLY [EXCEPT L3 Turbo].)  (See CALIPER (FRONT) DISASSEMBLY/  ASSEMBLY [L3 Turbo].)</p>
11	<p>Rear brake (disc)  (See REAR BRAKE (DISC) INSPECTION.)  (See REAR BRAKE (DISC) REMOVAL/  INSTALLATION.)  (See DISC PAD (REAR) REPLACEMENT.)  (See CALIPER (REAR) DISASSEMBLY/  ASSEMBLY.)</p>
12	<p>Rear brake (drum)  (See REAR BRAKE (DRUM) INSPECTION.)  (See REAR BRAKE (DRUM) REMOVAL/  INSTALLATION.)  (See BRAKE SHOE CLEARANCE ADJUSTMENT.)</p>