


AIR BYPASS VALVE INSPECTION [L3 Turbo]

id0113b5800500

1. Remove the air bypass valve. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [L3 Turbo].)
2. Connect the vacuum pump to the vacuum ports of the air bypass valve.

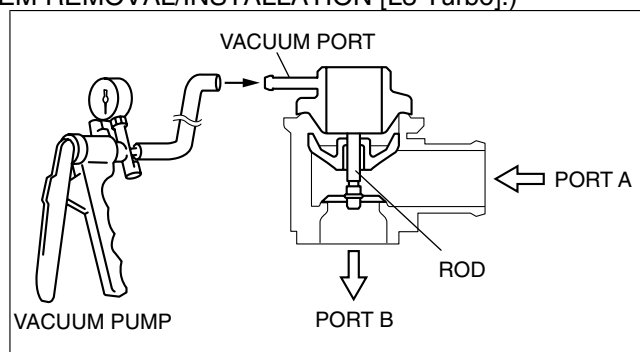


acxuuv00000287

3. Verify that the airflow is as indicated in the table.
 - If there is any malfunction, replace the air bypass valve.

Vacuum (kPa {mmHg, inHg})	Valve operation condition	Airflow between port A—B
-66 {-496, -20} or more	Open	Yes
-49 {-367, -14} or less	Closed	No

Approx. value

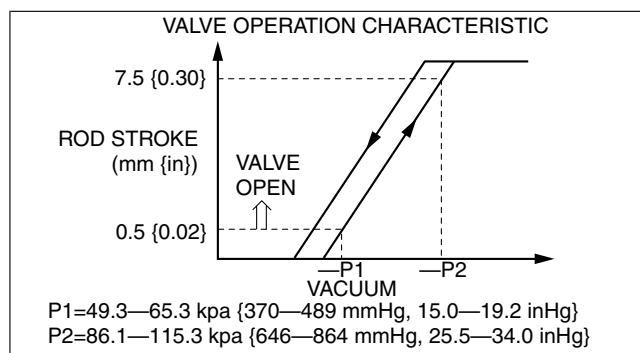

acxuuv00000286