


## MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/INSTALLATION[L3 Turbo]

id0140b6801000

1. Disconnect the negative battery cable.
2. Remove the charge air cooler duct. (See INTAKE AIR SYSTEM REMOVAL/INSTALLATION[L3 Turbo].)
3. Remove the oil level gauge pipe. (See OIL PAN REMOVAL/INSTALLATION[L3 Turbo].)
4. Disconnect the MAP/boost air temperature sensor connector.
5. Remove MAP/boost air temperature sensor from the intake manifold.
6. Install in the reverse order of removal.

### Tightening torque

**5.0—7.0 N·m {51—71 kgf·cm, 45—61 in·lbf}**

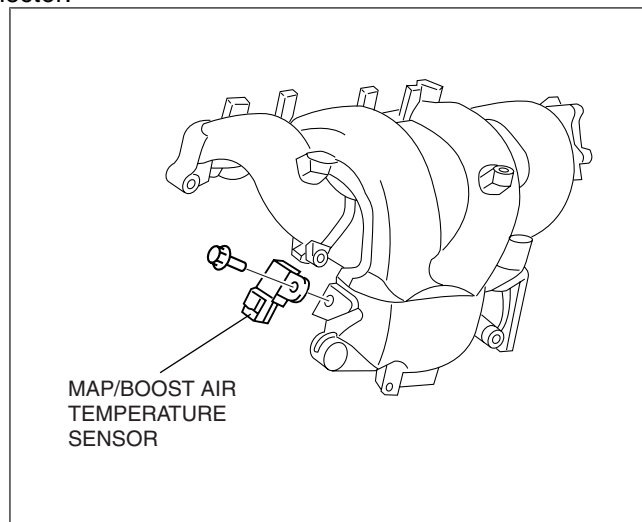

am3zzw00003406