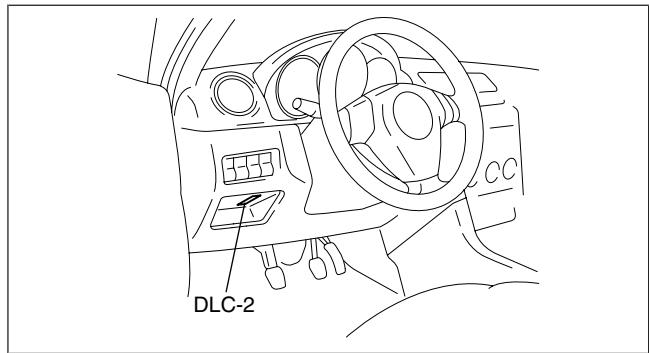

PCM CONFIGURATION[L3 Turbo]

id0140b6802600

1. Connect the M-MDS to DLC-2.
2. After the vehicle is identified, select the following items from the initialization screen of the M-MDS.
 - When using the IDS (laptop PC)
 1. Select the “Module Programming”.
 - When using the PDS (Pocket PC)
 1. Select “Programming”.
 2. Select “Module Programming”.
3. Then, select the “Programmable Module Installation” and “PCM” from the screen menu.
4. Select “Programmable Parameters”. [with DSC HU/CM]
5. Select “Tire Size / Axle Ratio”. [with DSC HU/CM]
6. Select “Body Type - (PCM)”, then select the applicable body type on the M-MDS screen. [with DSC HU/CM]
7. Retrieve DTCs using the M-MDS, then verify if DTCs are present.
 - If a DTC is present, perform the applicable DTC inspection.



am3zzw00000466