



---

1	Drive belt (SeeDRIVE BELT INSPECTION[L3 Turbo].) (SeeDRIVE BELT REMOVAL/INSTALLATION[L3 Turbo].) (SeeDRIVE BELT AUTO TENSIONER INSPECTION[L3 Turbo].)
2	Tappet (SeeVALVE CLEARANCE INSPECTION/ADJUSTMENT[L3 Turbo].)
3	Engine (SeeCOMPRESSION INSPECTION[L3 Turbo].) (SeeENGINE REMOVAL/INSTALLATION[L3 Turbo].) (SeeENGINE DISASSEMBLY/ASSEMBLY[L3 Turbo].) (SeeENGINE TUNE-UP[L3 Turbo].)
4	Timing chain (SeeTIMING CHAIN REMOVAL/INSTALLATION[L3 Turbo].)
5	Cylinder head gasket (SeeCYLINDER HEAD GASKET REPLACEMENT [L3 Turbo].)
6	Front oil seal (SeeFRONT OIL SEAL REPLACEMENT[L3 Turbo].)
7	Rear oil seal (SeeREAR OIL SEAL REPLACEMENT[L3 Turbo].)
8	OCV (SeeOIL CONTROL VALVE (OCV) REMOVAL/INSTALLATION[L3 Turbo].) (SeeOIL CONTROL VALVE (OCV) INSPECTION[L3 Turbo].)
9	Variable valve timing actuator (SeeVARIABLE VALVE TIMING ACTUATOR INSPECTION[L3 Turbo].) (SeeVARIABLE VALVE TIMING ACTUATOR REMOVAL/INSTALLATION[L3 Turbo].)