


INTAKE AIR SYSTEM LOCATION INDEX[L3 Turbo]

id0113b5800100

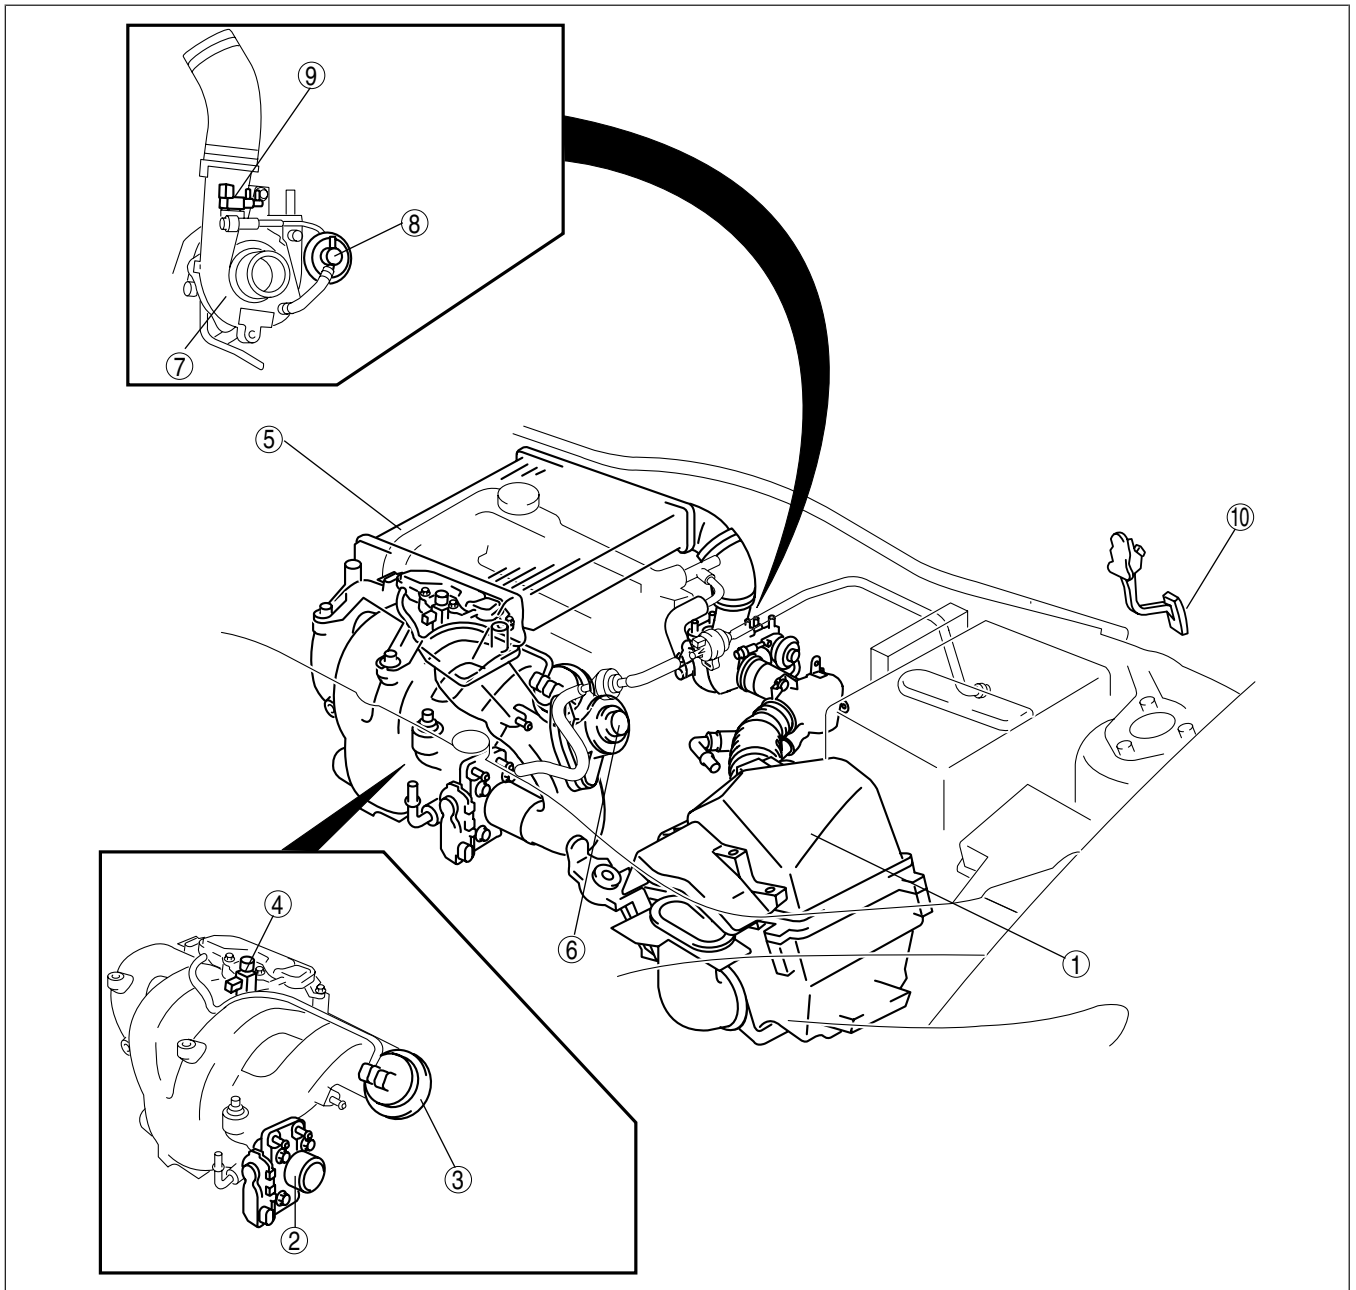

am3zzw00003493

| | |
|---|--|
| 1 | Air cleaner (See INTAKE AIR SYSTEM REMOVAL/ INSTALLATION[L3 Turbo].) (See AIR CLEANER ELEMENT INSPECTION[L3 Turbo].) |
| 2 | Throttle body (See INTAKE AIR SYSTEM REMOVAL/ INSTALLATION[L3 Turbo].) (See THROTTLE ACTUATOR INSPECTION[L3 Turbo].) |
| 3 | Variable swirl shutter valve actuator (See INTAKE AIR SYSTEM REMOVAL/ INSTALLATION[L3 Turbo].) (See VARIABLE SWIRL SHUTTER VALVE ACTUATOR INSPECTION[L3 Turbo].) |
| 4 | Variable swirl solenoid valve (See INTAKE AIR SYSTEM REMOVAL/ INSTALLATION[L3 Turbo].) (See VARIABLE SWIRL SOLENOID VALVE INSPECTION[L3 Turbo].) |

| | |
|----|--|
| 5 | Charge air cooler (See INTAKE AIR SYSTEM REMOVAL/ INSTALLATION[L3 Turbo].) (See CHARGE AIR COOLER INSPECTION[L3 Turbo].) |
| 6 | Air bypass valve (See AIR BYPASS VALVE INSPECTION[L3 Turbo].) |
| 7 | Turbocharger (See INTAKE AIR SYSTEM REMOVAL/ INSTALLATION[L3 Turbo].) (See TURBOCHARGER INSPECTION[L3 Turbo].) |
| 8 | Wastegate actuator (See WASTEGATE ACTUATOR INSPECTION[L3 Turbo].) |
| 9 | Wastegate control solenoid valve (See INTAKE AIR SYSTEM REMOVAL/ INSTALLATION[L3 Turbo].) (See WASTEGATE CONTROL SOLENOID VALVE INSPECTION[L3 Turbo].) |
| 10 | Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION[L3 Turbo].) (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION[L3 Turbo].) |