


## FUEL SYSTEM LOCATION INDEX[L3 Turbo]

id0114b4800100

### Engine Compartment Side

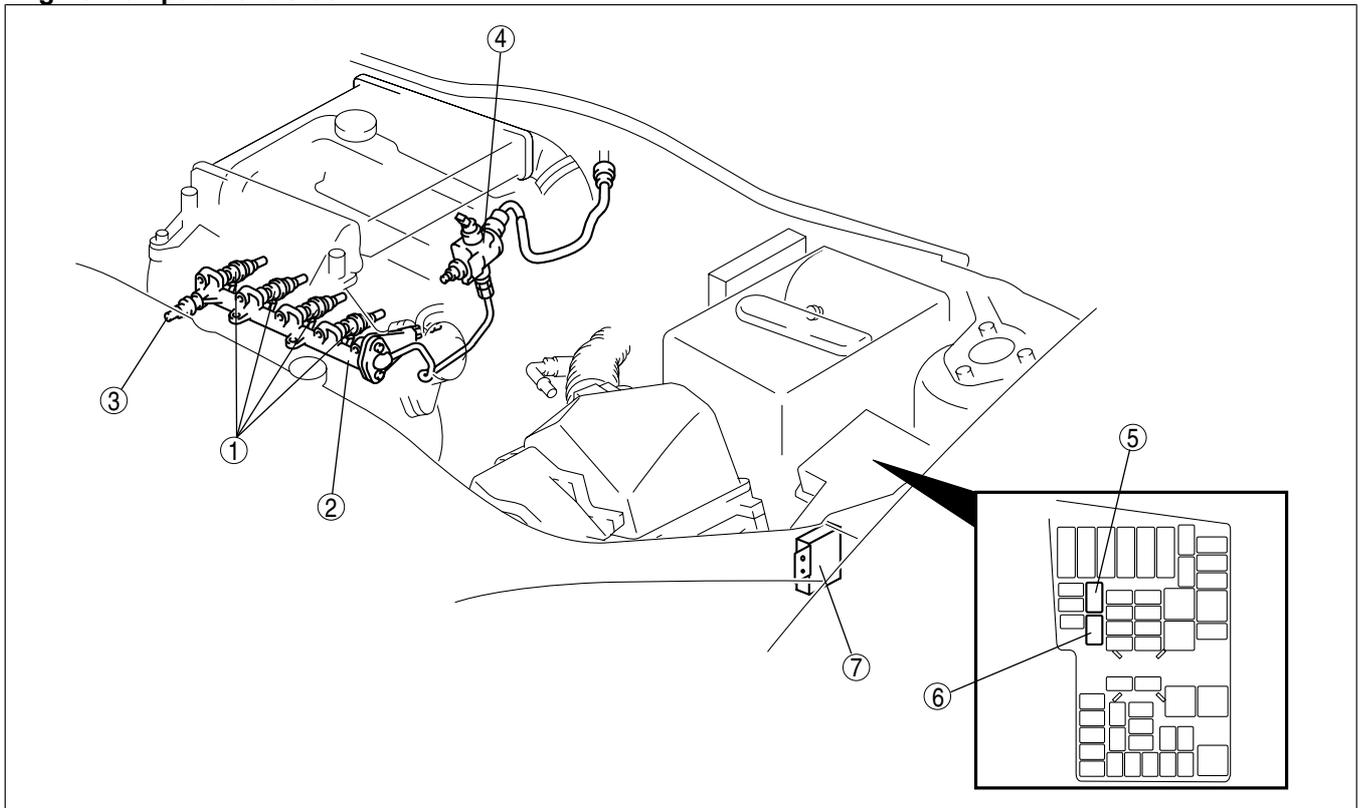


am3uuw00000259

1	Fuel injector (See FUEL INJECTOR REMOVAL/INSTALLATION [L3 Turbo].) (See FUEL INJECTOR INSPECTION[L3 Turbo].)
2	Fuel delivery pipe (See FUEL INJECTOR REMOVAL/INSTALLATION [L3 Turbo].)
3	Fuel pressure sensor

4	High pressure fuel pump (See HIGH PRESSURE FUEL PUMP REMOVAL/INSTALLATION[L3 Turbo].) (See HIGH PRESSURE FUEL PUMP INSPECTION [L3 Turbo].)
5	Fuel pump relay
6	Fuel pump speed control relay
7	Fuel pump resistor (See FUEL PUMP RESISTOR REMOVAL/INSTALLATION[L3 Turbo].) (See FUEL PUMP RESISTOR INSPECTION[L3 Turbo].)

## Fuel Tank Side

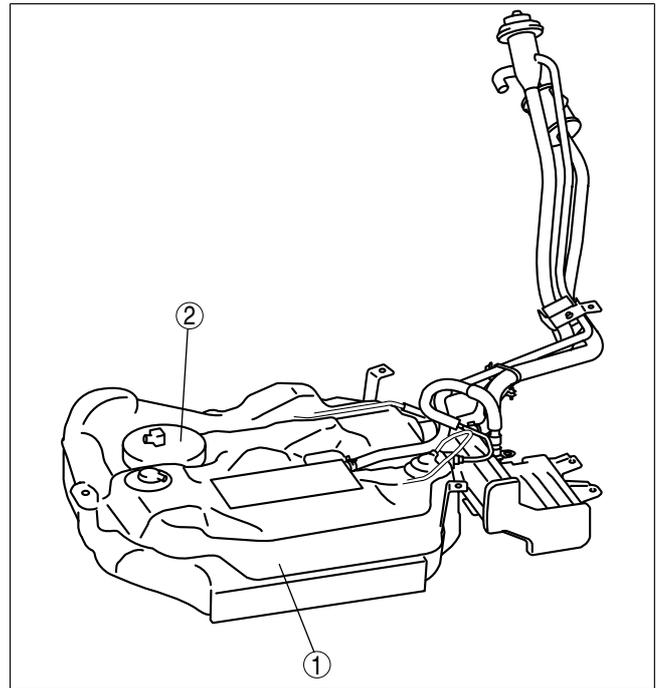

am3zzw00003120

1	Fuel tank (See FUEL TANK REMOVAL/INSTALLATION[L3 Turbo].) (See FUEL TANK INSPECTION[L3 Turbo].)
2	Fuel pump unit (See FUEL PUMP RESISTOR REMOVAL/INSTALLATION[L3 Turbo].) (See FUEL PUMP UNIT DISASSEMBLY/ASSEMBLY[L3 Turbo].) (See FUEL PUMP UNIT INSPECTION[L3 Turbo].)