
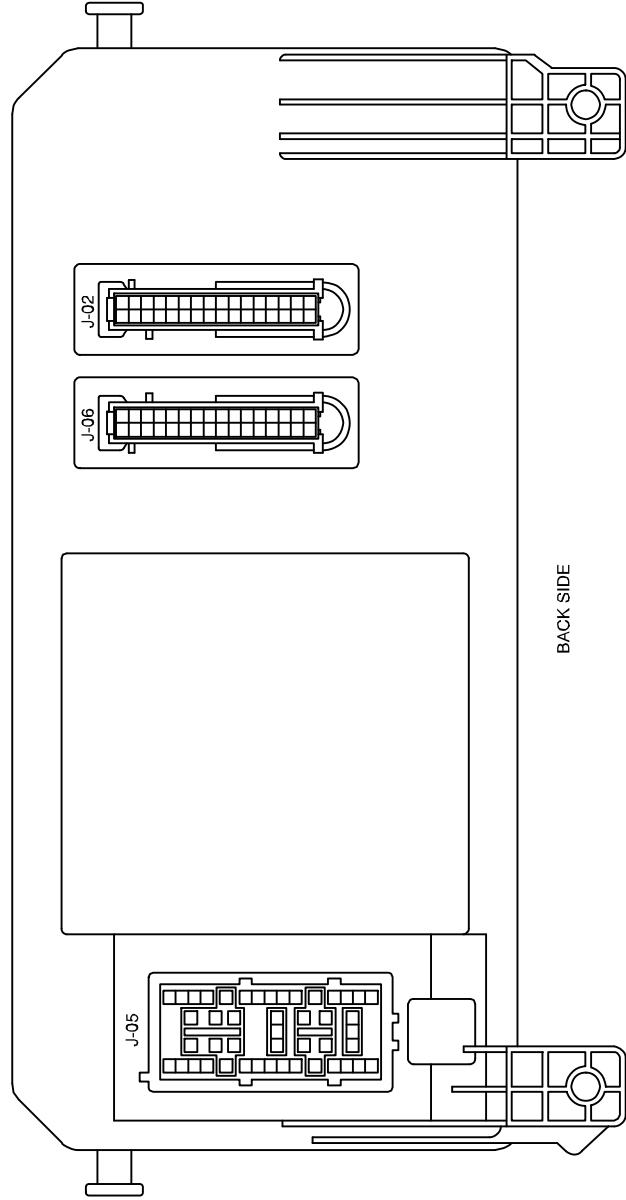



[] IF EQUIPPED < > NOT USED
RELAY BUILT INTO PJB * VACANT

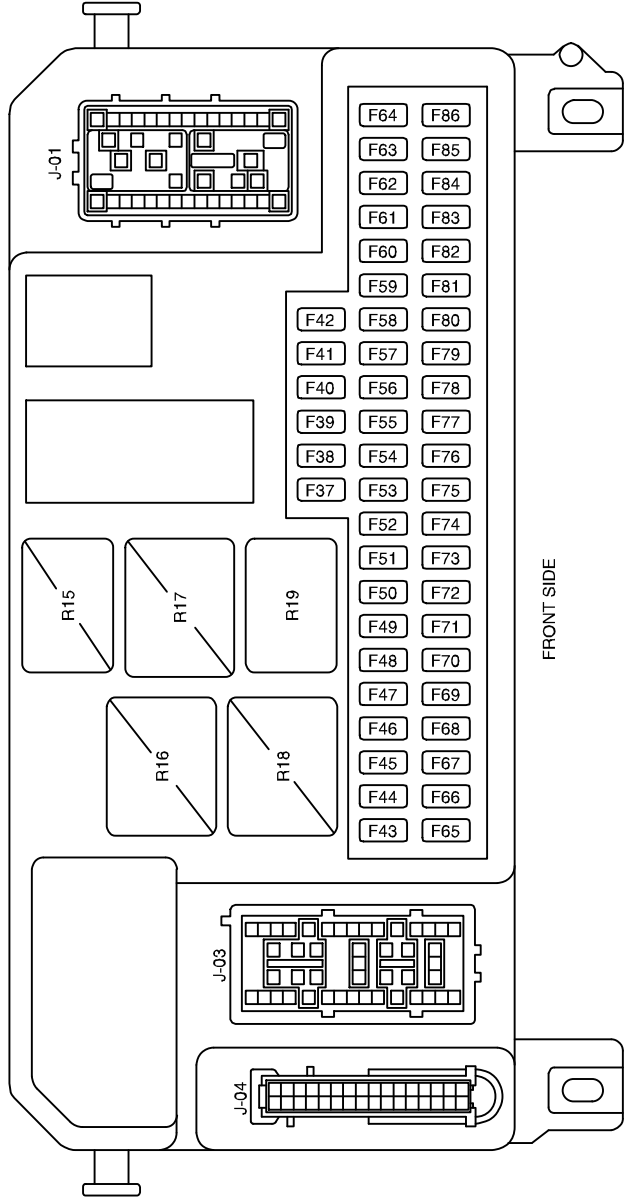


NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
F37	[D/LOCK 2]	[15A]	F62	*	*
F38	STOP LAMP/HORN	10A	F63	*	*
F39	HEAD HIGH L	10A	F64	*	*
F40	HEAD HIGH R	10A	F65	SAS	10A
F41	*	*	F66	METER	10A
F42	*	*	F67	IGNITION	20A
F43	CIGAR	15A	F68	WIPER	20A
F44	RADIO	7.5A	F69	ENGINE	20A
F45	[MIRROR]	[10A]	F70	[IG SIG]	[10A]
F46	TAIL R	7.5A	F71	<SAS 2>	<7.5A>
F47	OBD	10A	F72	*	*
F48	*	*	F73	*	*
F49	[TR/LOCK]	[20A]	F74	[SEAT WARM]	[20A]
F50	*	*	F75	D/LOCK 1	25A
F51	*	*	F76	A/C	10A
F52	[SUN ROOF]	[20A]	F77	<P/WIND L>	<30A>
F53	WASHER	20A	F78	<P/WIND R>	<30A>
F54	*	*	F79	BACK	10A
F55	[P/WIND R]	[30A]	F80	[SUN ROOF]	[7.5A]
F56	[P/WIND L]	[30A]	F81	TAIL L	7.5A
F57	<ALARM>	<7.5A>	F82	ILLUMI	7.5A
F58	[M/DEF]	[7.5A]	F83	*	*
F59	*	*	F84	*	*
F60	HEAD LOW R	15A	F85	*	*
F61	HEAD LOW L	15A	F86	*	*

NO.	RELAY NAME	NO.	RELAY NAME
R15	*	#R25	FRONT WIPER LOW RELAY
R16	*	#R26	FRONT WIPER HIGH RELAY
R17	*	#R27	HEADLIGHT HIGH RELAY
R18	*	#R28	TNS RELAY
R19	[RUNNING LIGHT RELAY]	#R29	<DRIVER-SIDE UNLOCK RELAY>
R20	*	#R30	[DOUBLE LOCK RELAY]
R21	*	#R31	DOOR UNLOCK RELAY
#R22	[TRUNK LID OPENER RELAY]	#R32	DOOR LOCK RELAY
#R23	HEADLIGHT LOW RELAY	#R33	[REAR WIPER RELAY]
#R24	[SHIFT-LOCK RELAY]	#R34	[REAR FOG LIGHT RELAY]


J-01 FRONT HARNESS

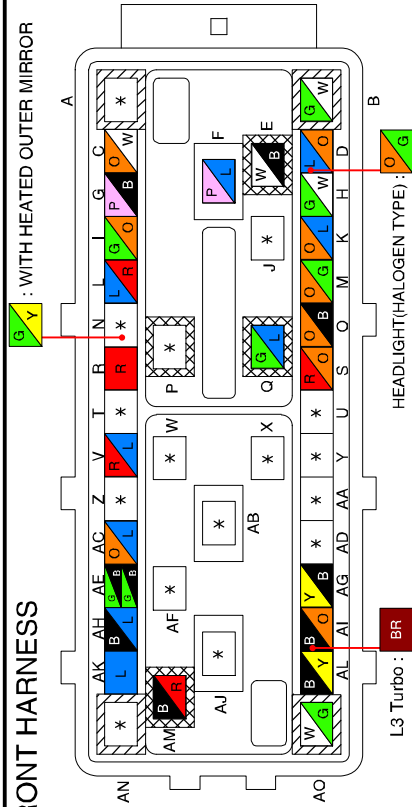


J-02 FRONT HARNESS

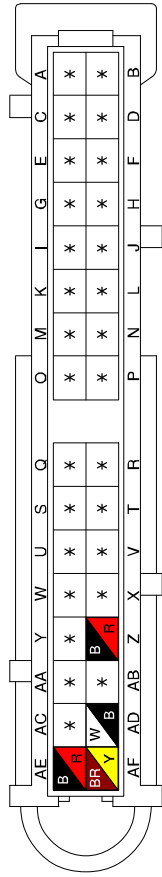


J-03 INSTRUMENT PANEL HARNESS

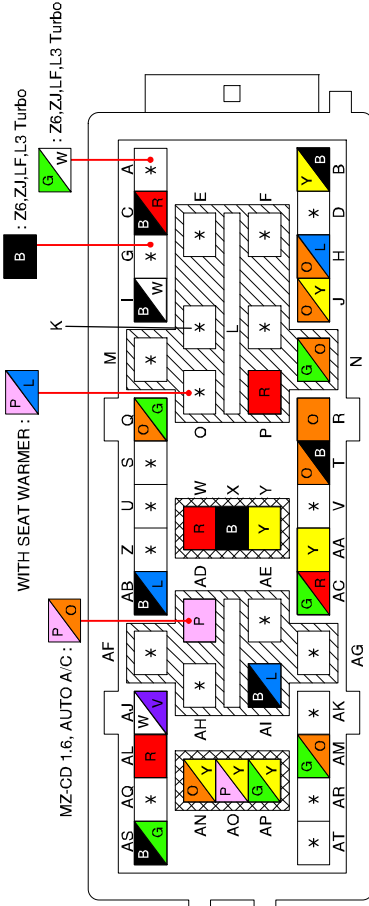

J-04 INSTRUMENT PANEL HARNESS

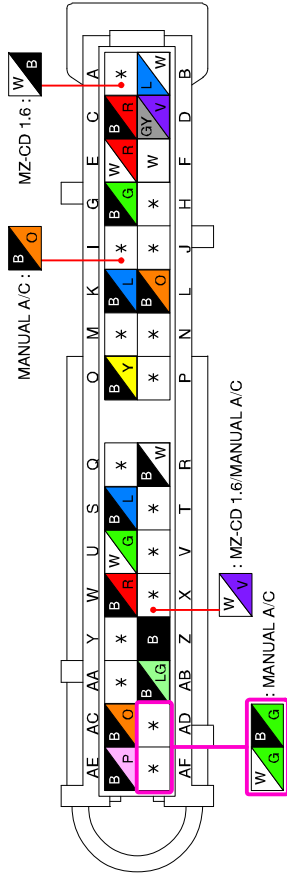

J-05 REAR HARNESS

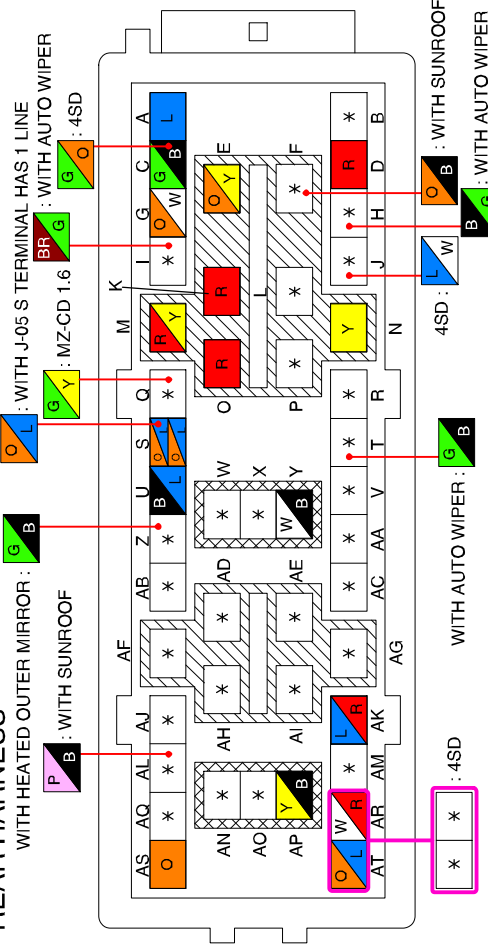

J-06 REAR HARNESS

